

SELF-CLOSING HINGES

CHARNIÈRES À FERMETURE AUTOMATIQUE

For screen doors and other light-weight doors where automatic closing is desired.


Pour moustiquaires et autres portes légères ou une fermeture automatique est désirable.

STANDARD INSTALLATION

1. Close door. The door should have approximately 1/8" (3 mm) clearance from the frame.
2. Mark and drill 7/64" (2.8 mm) starter holes for the hinge screws. Drilling pilot holes of sufficient size and depth will ease installation and prevent wood splitting.
3. Attach hinges with the included screws.

INSTRUCTIONS D'ASSEMBLAGE

1. Laissez la porte se fermer. La porte devrait avoir à peu près 1/8" (3 mm) de jeu dans le chambranle.
2. Marquer la place des vis de charnières et percer les trous pilotes de 7/64" (2.8 mm). Afin de faciliter la pose et de prévenir la fente du bois, percer un trou pilote de dimension et de profondeur suffisantes.
3. Visser les charnières avec les vis fournies.

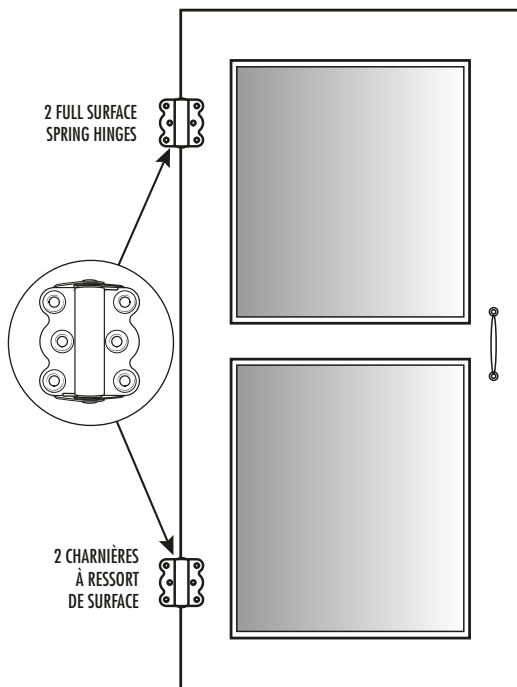

The closing force of these hinges cannot be adjusted. For hinges with adjustable tension, see our SK920 hinge kit.

La tension du ressort est pré-réglée et ne peut être changée. Pour des charnières à tension réglable, voir notre SK920.

Questions?

info@idealinc.com
1-800-361-2236
MADE IN TAIWAN
FABRIQUÉ À TAIWAN



/IdealSince1956



/IdealSecurityInc

www.idealinc.com
ONE YEAR WARRANTY
GARANTIE D'UN AN

SK919

IDEAL SECURITY INC.

LASALLE, QC • PRESCOTT, ON • CORAOPOLIS, PA